



Illustrated Parts List

Model Series

15C100

TYPE NUMBERS
0111 through 8939.

TABLE OF CONTENTS

Blower Housing/Shrouds	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	6
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets - Carburetor	4
Kits/Gaskets - Engine	2
Kits/Gaskets - Valves	3
Lubrication	2
Piston Group	2
Rewind Starter	5



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

15C100













1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.





1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL











1019 LABEL KIT

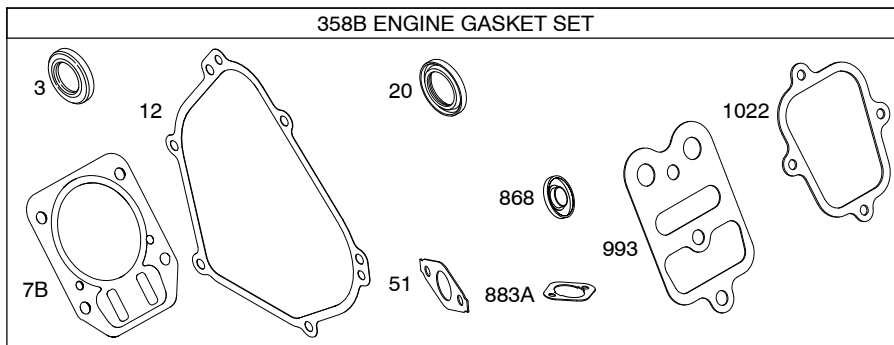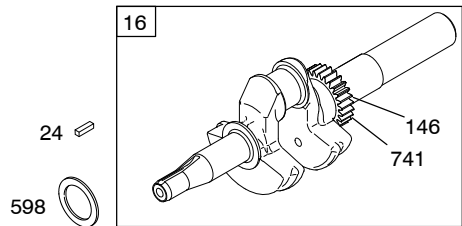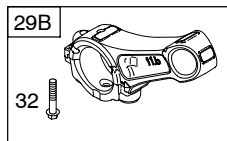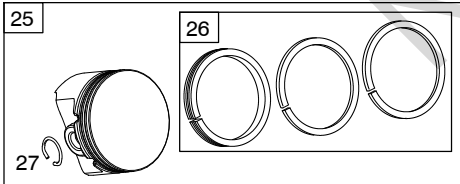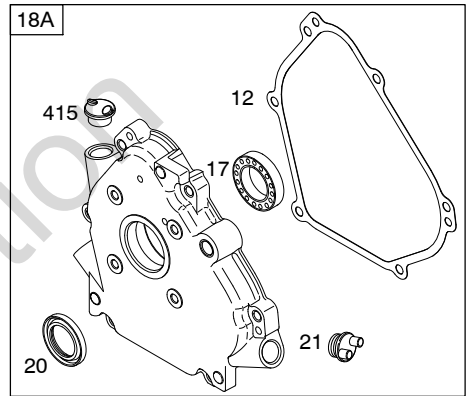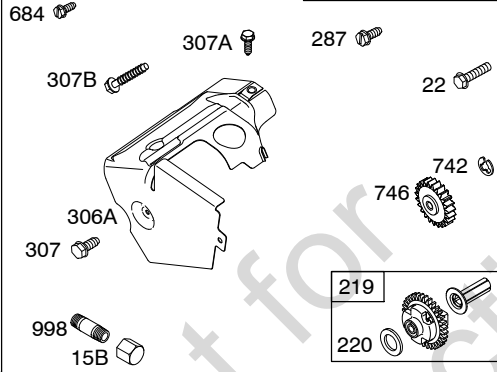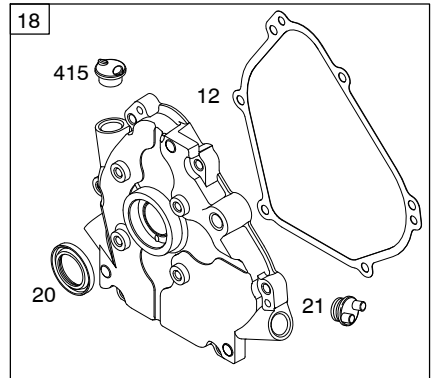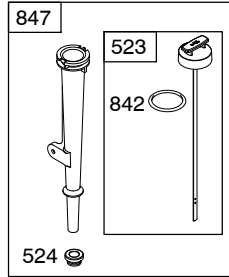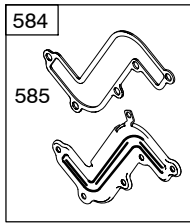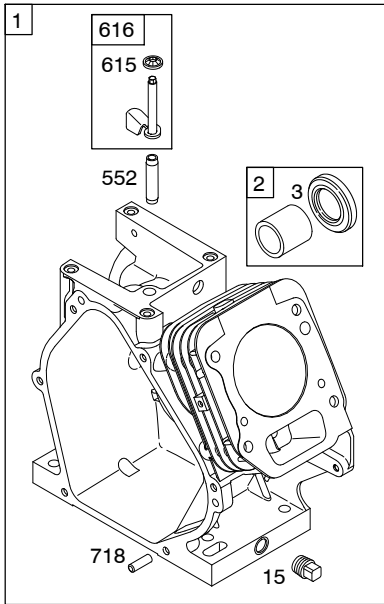


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3946-2 Assemblies include all parts shown in frames. 02/22/2010

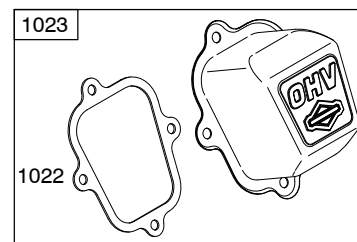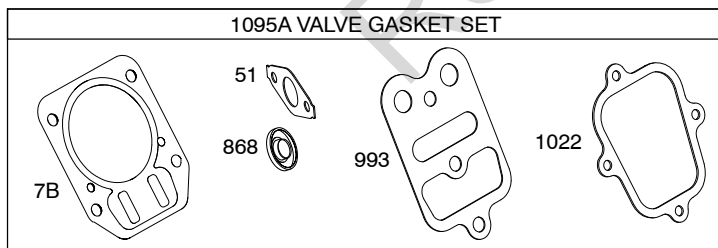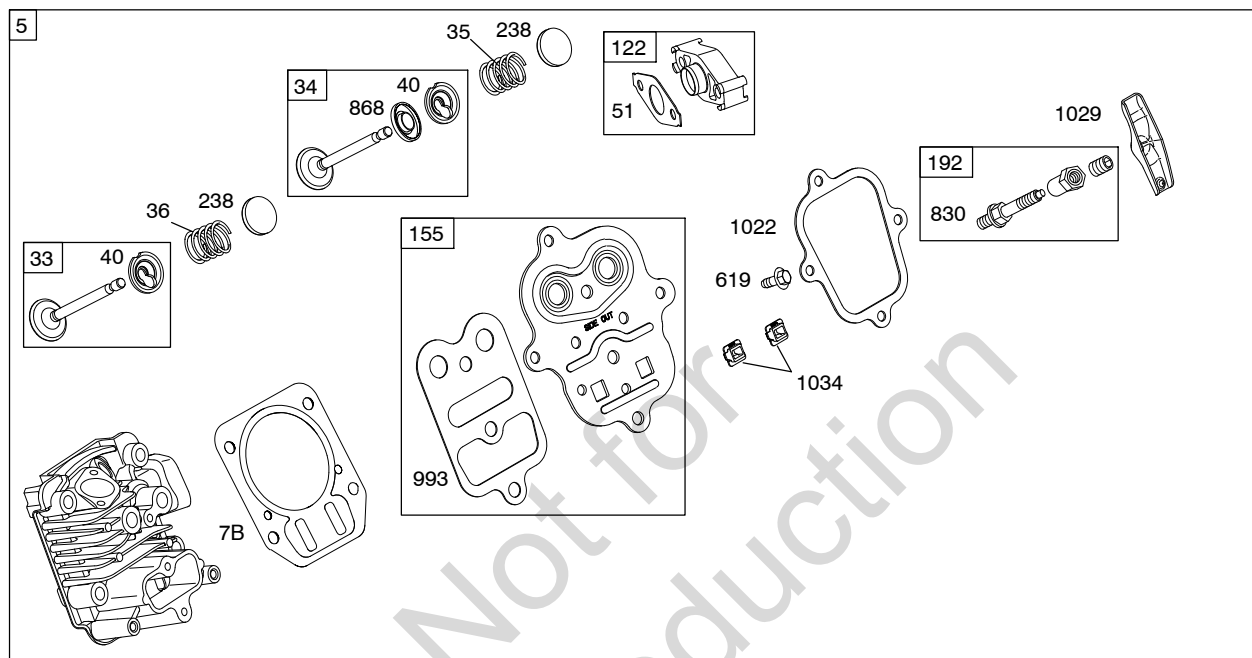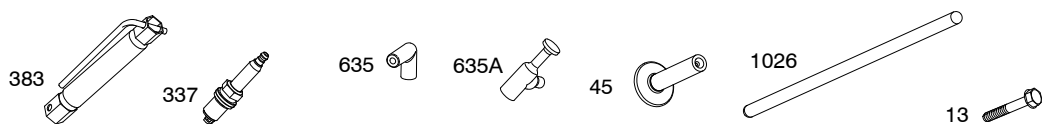

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3946-3 Assemblies include all parts shown in frames. 02/22/2010

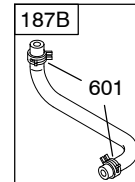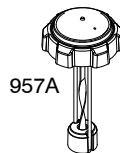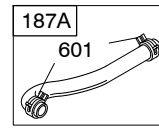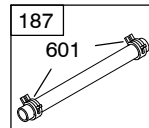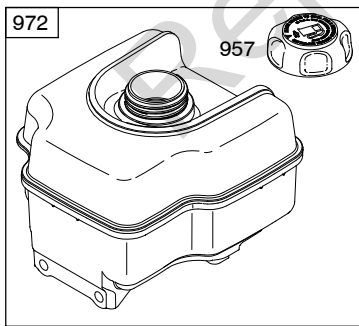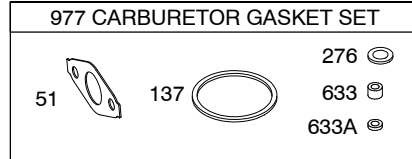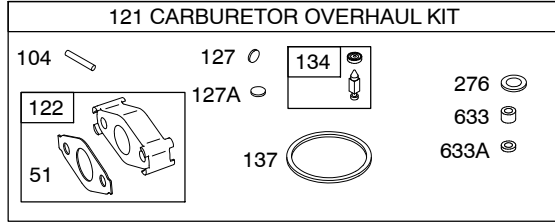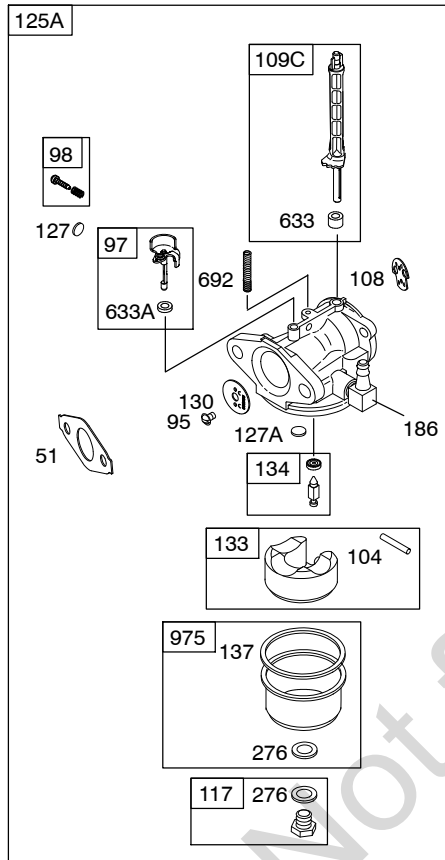


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3946-4 Assemblies include all parts shown in frames. 02/22/2010

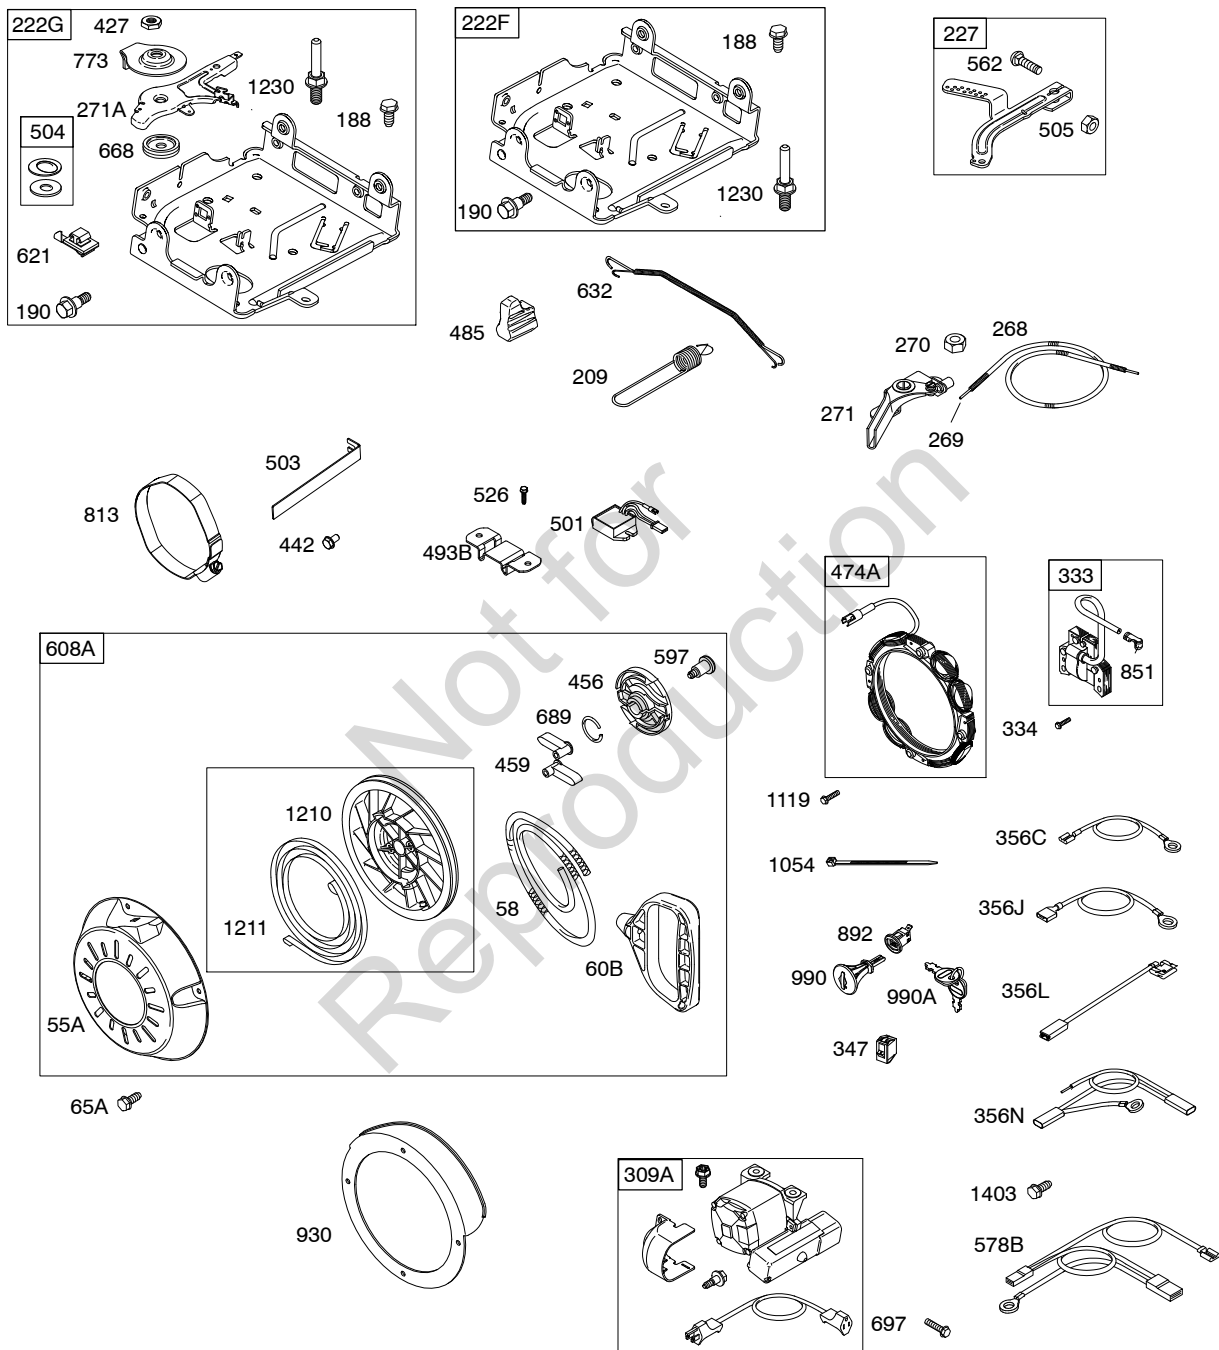

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3946-5 Assemblies include all parts shown in frames. 02/22/2010

15C100

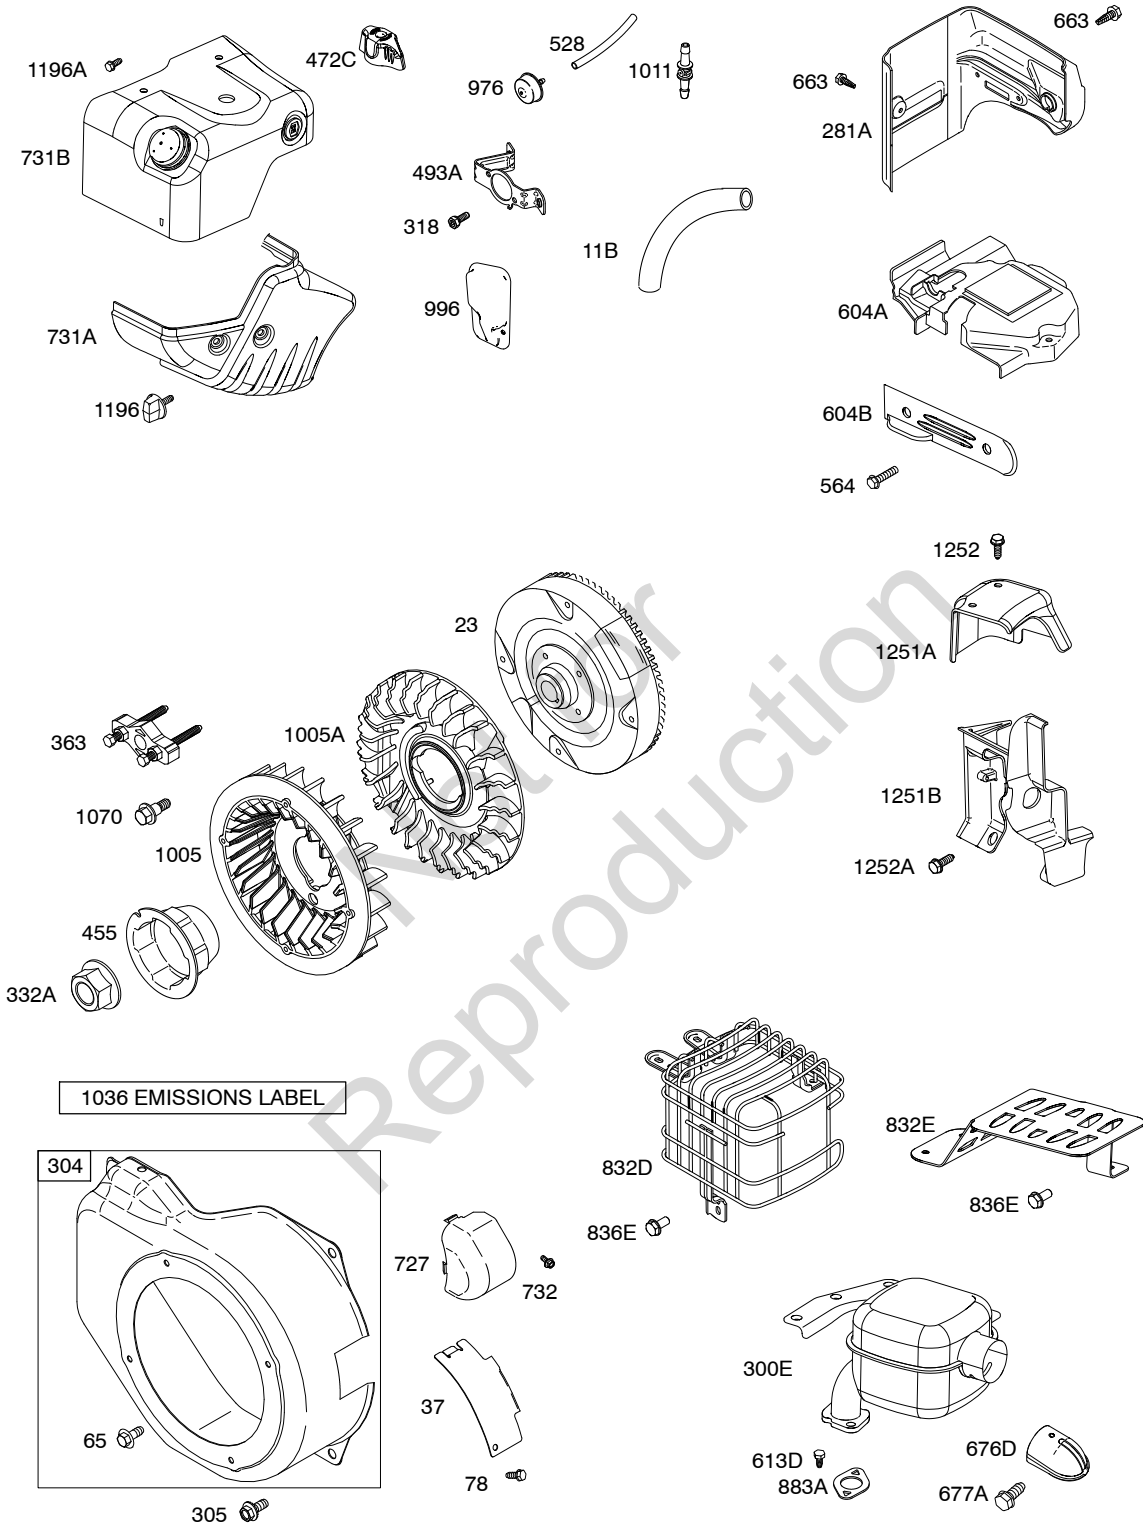

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3946-6 Assemblies include all parts shown in frames. 02/22/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	794188	Cylinder Assembly	22	699478	Screw (Crankcase Cover/ Sump)	78	699205	Screw (Flywheel Guard)
2	399269	Kit-Bushing/Seal (Magneto Side)	23	699516	Flywheel	95	691636	Screw (Throttle Valve)
3	★299819S	Seal-Oil (Magneto Side)	24	222698S	Key-Flywheel	97	690024	Shaft-Throttle
5	791720	Head-Cylinder	25	791786	Piston Assembly (Standard)	98	398185	Kit-Idle Speed
7B	★∅791716	Gasket-Cylinder Head	----- Note -----			104	●691242	Pin-Float Hinge
11B	695745	Tube-Breather	26	791787	Ring Set (Standard)	108	695807	Valve-Choke
12	★699485	Gasket-Crankcase	----- Note -----			109C	791954	Shaft-Choke
13	699482	Screw (Cylinder Head)	27	690975	Lock-Piston Pin	117	694176	Jet-Main (Standard)
15	691686	Plug-Oil Drain	28	690229	Pin-Piston	118	695042	Jet-Main (High Altitude)
15B	695757	Plug-Oil Drain	29B	791783	Rod-Connecting	121	792006	Kit-Carburetor Overhaul
16	699445	Crankshaft	32	791784	Screw (Connecting Rod)	122	●791717	Spacer-Carburetor
----- Note -----			33	499642	Valve-Exhaust	125A	794588	Carburetor
791721 Crankshaft Used on Type No(s). 0939, 1212, 1240, 1365, 8240, 8939.			34	499641	Valve-Intake	127	●694468	Plug-Welch
795116 Crankshaft Used on Type No(s). 0612, 0613, 0614, 0661, 0662, 0682, 0683.			35	691304	Spring-Valve (Intake)	127A	●691739	Plug-Welch
797253 Crankshaft Used on Type No(s). 0127, 0128, 0129, 0130, 0132.			36	691304	Spring-Valve (Exhaust)	130	691181	Valve-Throttle
17	692517	Bearing-Ball	37	699661	Guard-Flywheel	133	398187	Float-Carburetor
18	699804	Cover-Crankcase	40	692194	Retainer-Valve	134	●398188	Kit-Needle/Seat
----- Note -----			45	690977	Tappet-Valve	137	●693981	Gasket-Float Bowl
699696 Cover- Crankcase Used on Type No(s). 0124, 0125, 0126, 0612, 0613, 0614, 0661, 0662, 0682, 0683.			46	693404	Camshaft	155	797442	Plate-Cylinder Head (Metric) (Used After Code Date 09061700). ----- Note -----
18A	699672	Cover-Crankcase	51	★◆∅791718	Gasket-Intake	698214 Plate-Cylinder Head (SAE) (Used Before Code Date 09061800).		
20	★692550	Seal-Oil (PTO Side)	55A	696710	Housing-Rewind Starter	146	690979	Key-Timing
21	281658S	Cap-Oil Fill	58	693389	Rope-Starter (Cut To Required Length)	186	692317	Connector-Hose
			60B	699334	Grip-Starter Rope	187	791766	Line-Fuel (Cut to Required Length)
			65	699228	Screw (Rewind Starter)	187A	791867	Line-Fuel (Molded)
			65A	699851	Screw (Rewind Starter)	187B	791874	Line-Fuel (Molded)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

15C100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	699479	Screw (Control Bracket)	281A	793122	Panel-Control ----- Note ----- 793133 Panel-Control Used on Type No(s). 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0132.	318	690370	Screw (Mounting Bracket)
190	699220	Screw (Fuel Tank)				332A	792723	Nut (Flywheel)
192	797440	Adjuster-Rocker Arm (Metric) (Used After Code Date 09061700). ----- Note ----- 694543 Adjuster- Rocker Arm (SAE) (Used Before Code Date 09061800).	287	699629	Screw (Dipstick Tube)	333	695711	Armature-Magneto
			300E	796422	Muffler (Used After Code Date 08113000). ----- Note ----- 791940 Muffler (Used Before Code Date 08120100).	334	699477	Screw (Magneto Armature)
209	692571	Spring-Governor ----- Note ----- 691278 Spring- Governor Used on Type No(s). 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0132.	304	699598	Housing-Blower	337	491055S	Plug-Spark (Resistor) ----- Note ----- 691043 Plug-Spark (EMS)
			305	699481	Screw (Blower Housing)	347	698338	Switch-Rocker ----- Note ----- 691995 Switch-Rocker Used on Type No(s). 0612.
219	693578	Gear-Governor	306A	695710	Shield-Cylinder	356C	695630	Wire-Stop
220	691724	Washer (Governor Gear)	307	699483	Screw (Cylinder Shield)	356J	692603	Wire-Stop
222F	793100	Bracket-Control	307A	699234	Screw (Cylinder Shield)	356L	790552	Wire-Stop
222G	793109	Bracket-Control	307B	790557	Screw (Cylinder Shield)	358B	791797	Set-Engine Gasket
227	692573	Lever-Governor Control	309A	793667	Motor-Starter Used on Type No(s). 0112, 0114, 0116, 0117, 0120, 0122, 0124, 0126, 0127, 0129, 0131, 0612, 0613, 0614, 0661, 0662, 0682, 0683, 0939, 1235, 1240, 1365, 8240, 8365, 8939. ----- Note ----- 699786 Motor-Starter Used on Type No(s). 0111, 0113, 0118, 0121, 0123, 0125, 0128, 0130, 0132, 1212.	356N	794819	Wire-Stop
238	691300	Cap-Valve				363	19203	Puller-Flywheel
268	691025	Control Wire Casing (Cut to Required Length)				365	699484	Screw (Carburetor)
269	691026	Control Wire (Cut to Required Length)				383	19374S	Wrench-Spark Plug
270	691027	Nut (Control Wire Casing)				415	693463	Plug
271	691028	Lever-Control				427	798458	Nut (Control Bracket) (Metric) ----- Note ----- 694255 Nut (Control Bracket) (SAE)
271A	698038	Lever-Control				442	790282	Screw (Starter Strap)
276	◆271716	Washer-Sealing				455	692591	Cup-Flywheel
						456	692299	Plate-Pawl Friction
						459	281505S	Pawl-Ratchet
						472C	791948	Knob-Choke Shaft

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474A	793640	Alternator ----- Note ----- 791743 Alternator Used on Type No(s). 0117, 0118, 0123, 0126, 0127, 0130, 0612. 793118 Alternator Used on Type No(s). 0613, 0614, 0661, 0662, 0682, 0683. 797090 Alternator Used on Type No(s). 0120, 0121, 0122, 0124, 0125, 0128, 0129, 0132. 698314 Alternator Used on Type No(s). 0131.	564	699854	Screw (Control Cover)	718	690959	Pin-Locating
			578B	791956	Wire Assembly	727	698039	Cover-Starter Drive
			584	791759	Cover-Breather Passage	731A	794589	Hood-Snow
			585	791760	Gasket-Breather Passage	731B	793643	Hood-Snow ----- Note ----- 798183 Hood-Snow Used on Type No(s). 0132.
			597	691696	Screw (Pawl Friction Plate)	732	699200	Screw (Starter Drive Cover)
			598	220624	Shim-End Play	741	695087	Gear-Timing
			601	791850	Clamp-Hose	742	692564	Retainer-E Ring
			604A	793134	Cover-Control	746	790278	Gear-Idler
			604B	790473	Cover-Control	773	694258	Retainer
			608A	699335	Starter-Rewind	813	690635	Clamp
			613D	699209	Screw (Muffler)	830	797441	Stud-Rocker Arm (Metric) (Used After Code Date 09061700).
			615	692576	Retainer-Governor Shaft			----- Note ----- 694544 Stud-Rocker Arm (SAE) (Used Before Code Date 09061800).
485	695755	Knob-Control	616	692547	Crank-Governor			
493A	695744	Bracket-Mounting	619	699481	Screw (Cylinder Head Plate)			
493B	691177	Bracket-Mounting	621	692310	Switch-Stop			
501	698315	Regulator	632	692653	Spring/Link- Mechanical Governor			
503	796239	Strap-Starter	633	◆◆ 693867	Seal-Choke/Throttle Shaft	832D	793193	Guard-Muffler
504	694254	Washer Set-Friction	633A	◆◆ 691321	Seal-Choke/Throttle Shaft	832E	797003	Guard-Muffler
505	691251	Nut (Governor Control Lever)	635	692076	Boot-Spark Plug	836E	699854	Screw (Muffler Guard)
523	798469	Dipstick (Used After Code Date 10022100). ----- Note ----- 790546 Dipstick (Used Before Code Date 10022200).	635A	692927	Boot-Sparkplug	842	691031	Seal-O Ring (Dipstick Tube)
			663	699854	Screw (Control Panel)	847	798468	Dipstick/Tube Assembly (Used After Code Date 10022100). ----- Note ----- 790545 Dipstick/Tube Assembly (Used Before Code Date 10022200).
524	281370S	Seal-Dipstick Tube	668	694257	Spacer			
526	690297	Screw (Regulator)	676D	794213	Deflector-Muffler			
528	793006	Hose-Primer	677A	699776	Screw (Muffler Deflector)			
552	692346	Bushing-Governor Crank	684	791761	Screw (Breather Passage Cover)			
562	691119	Bolt (Governor Control Lever)	689	691855	Spring-Friction			
			692	690572	Spring-Detent			
			697	793567	Screw (Starter Motor)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

15C100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
851	493880S	Terminal-Spark Plug	958	698180	Valve-Fuel Shut Off (Plastic)	1054	280275	Tie-Cable
868	★∅692044	Seal-Valve				1058	277104	Operator's Manual
883A	★691893	Gasket-Exhaust	972	694260	Tank-Fuel (Plastic)			----- Note -----
892	791944	Switch-Key						279128 Operator's-Manual
		----- Note -----	975	493640	Bowl-Float			Used on Type No(s). 0132.
		798182 Switch-Key	976	793382	Primer-Carburetor	1070	699201	Screw (Flywheel Fan)
		Used on Type No(s). 0132.	977	792007	Gasket Set-Carburetor	1095A	791798	Gasket Set-Valve
914	699481	Screw (Rocker Cover) (Bottom)	990	695756	Key-Set	1119	699772	Screw (Alternator)
			990A	798177	Key-Set	1196	696692	Screw (Snow Hood)
			993	★∅694088	Gasket-Cylinder Head Plate	1196A	699854	Screw (Snow Hood)
914A	797444	Screw (Rocker Cover) (Top)(Metric) (Used After Code Date 09061700).	996	794687	Shield-Carburetor	1210	498144	Pulley/Spring Assembly (Pulley)
		----- Note -----	998	696683	Pipe-Oil (4" Long)			
		692557 Screw (Rocker Cover) (Top)(SAE) (Used Before Code Date 09061800).			----- Note -----	1211	498144	Pulley/Spring Assembly (Spring)
					792928 Pipe-Oil (2 1/2" Long)	1230	699847	Screw (Control Bracket)
					794701 Pipe-Oil (5" Long)	1251A	796421	Shield-Snow (Used After Code Date 08113000).
			1005	692592	Fan-Flywheel			----- Note -----
			1005A	794273	Fan-Flywheel			790555 Shield-Snow (Used Before Code Date 08120100).
			1011	794544	Tube-Vent	1251B	790556	Shield-Snow
			1019	791811	Kit-Label	1252	699629	Screw (Snow Shield)
			1022	★∅691890	Gasket-Rocker Cover	1252A	699491	Screw (Snow Shield)
			1023	499924	Cover-Rocker Arm	1319	794467	Label-Warning
			1026	790287	Rod-Push	1330	272147	Repair Manual
			1029	797443	Arm-Rocker (Metric) (Used After Code Date 09061700).	1403	699481	Screw (Wire Assembly)
					----- Note -----			
					691230 Arm-Rocker (SAE) (Used Before Code Date 09061800).			
914B	797444	Screw (Rocker Cover) (Center)(Metric) (Used After Code Date 09061700).	1034	691343	Guide-Push Rod			
		----- Note -----	1036		Label-Emissions (Available From An Authorized Briggs & Stratton Sevice Dealer)			
		697551 Screw (Rocker Cover) (Center)(SAE) (Used Before Code Date 09061800).						
930	696709	Guard-Rewind						
957	792647	Cap-Fuel Tank (Fresh Start)						
		----- Note -----						
		795027 Cap-Fuel Tank (Text Free)						
957A	698109	Cap-Fuel Tank						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

